

Handling Notes for Slipper Maid

STARTING

- Unlock padlocks, place locks in pocket provided, and open engine cover.
- Check oil and water contents, and rotate stern greaser a quarter turn.
- Turn both battery switches 'on', then close engine cover.

DO NOT TOUCH THE COOLING WATER SEACOCK. IT REMAINS 'OPEN
AT ALL TIMES.

- Ensure throttle/gear lever is in neutral and disengage gearbox by easing lever outwards, then open throttle slightly.
- Push 'Heat' button for 5 secs max. A longer time is unnecessary and harmful.
- Push 'Start' button and allow engine to warm for a couple of minutes
- Check that water is coming out of the exhaust pipe – STOP engine if not!
- Return throttle to idle and proceed as required.

STOPPING

- Press 'Stop' button.
- Open engine cover and switch off batteries, leaving battery keys in sockets.
- Close and padlock engine cover.
- Return keys to boathouse

DO NOT TOUCH THE COOLING WATER SEACOCK. IT REMAINS OPEN AT
ALL TIMES.

Please leave The Maid as you found it – in pristine condition. Report any problems to the Bosun Team in the book inside the boathouse